

Sonus faber

ARTISAN OF SOUND

OLYMPICA

•

MIDWOOFER REPLACEMENT



Carefully lift the front baffle up using your fingers as shown in the picture.
Pay attention not to ruin it with your nails.




Carefully lift the front baffle up by covering its outline as shown in the picture.



Unscrew the 8 screws that fasten the midwoofer to the cabinet using a T15 screwdriver.



Lift the driver up using a big screw or a flat-blade screwdriver. Pay attention not to ruin the leather coating.

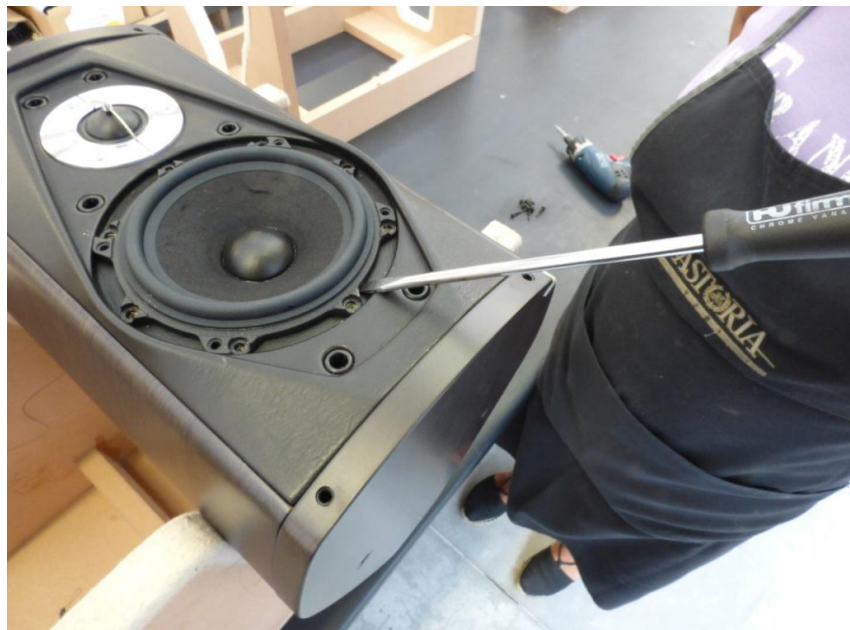

Unsolder the contacts, replace and solder the new driver's contacts, paying attention to respect the correct polarity.



+ → transparent cable (the bigger contact).
- → black-white cable (the smaller contact).

For installation, do the above in inverted order.

•*Sf*•

THANK YOU